

Installation Instructions

LNT™ SmartFinder™ Lens

For use with Meade LX-90 Series Telescopes

Introduction

The LX90 telescope is shipped with the LNT module attached. However, the lens for the SmartFinder is shipped unattached so that it is not damaged or scratched during transport.

Assembly

1. The lens for the SmartFinder is shipped with a protective film to protect the lens coating. Do not remove this film until told to do so in the instructions.

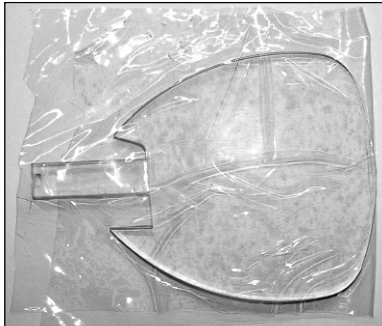


Fig. A: Lens with protective film.

First peel back the film from just the “tongue” of the SmartFinder lens.

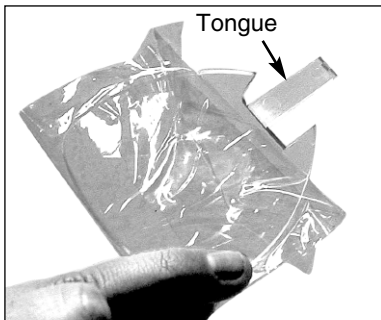


Fig. B: Peel back film from just the “tongue” of the lens.

2. Insert the tongue into the SmartFinder slot. Angle the tongue towards the front of the LNT module as you slide it into place.

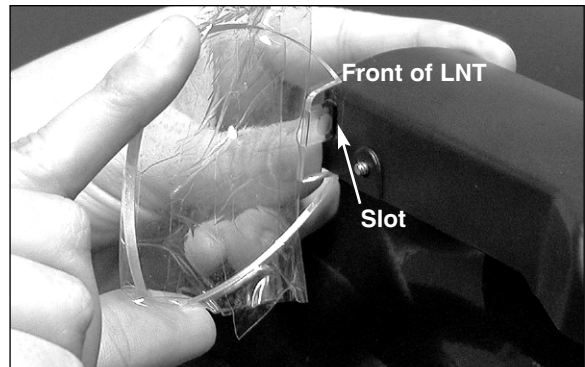


Fig. C: Inset tongue into LNT module slot.

3. You may need to wiggle the lens/tongue a bit to slide the tongue into place. You will hear an audible click when the lens is completely inserted and locked into place.
4. Remove the remainder of the plastic film from the lens, but avoid touching the lens as you do so—you may scratch the lens or leave fingerprints.

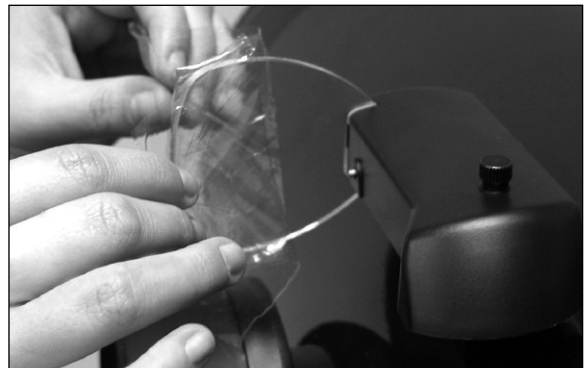


Fig. D: Remove the rest of the protective film.

5. To clean the surface of the lens, use a camel hair brush to gently remove the dust. A high-quality lens cleaning cloth is also acceptable.

If you have a question concerning use of the Meade **SMARTFINDER**, call the Meade Instruments Customer Service Department at (949) 451-1450. Customer Service hours are 7:00 AM to 6:00 PM, Pacific Time, Monday through Friday.



MEADE®

6001 Oak Canyon, Irvine, California 92618
(949) 451-1450 ■ www.meade.com